


SAMSUNG

Operating Instructions

VACUUM CLEANER

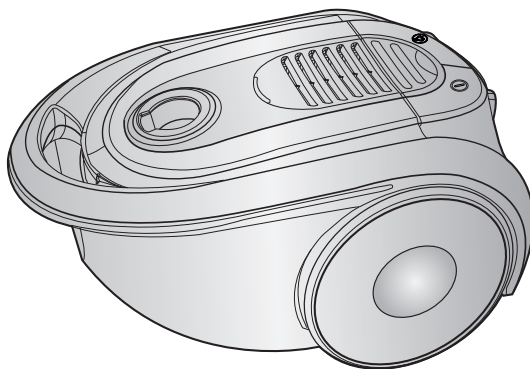

- * Before operating this unit, please read the instructions carefully.
- * For indoor use only.



Register your product at www.samsung.com/global/register

DJ68-00329F REV(0.2)

IMPORTANT SAFEGUARDS

1. Read all instructions carefully. Before switching on, make sure that the voltage of your electricity supply is the same as that indicated on the rating plate on the bottom of the cleaner.
2. **WARNING:** Do not use the vacuum cleaner when rug or floor is wet.
Do not use to suck up water.
3. This appliance is not intended for use by young persons or infirm persons without supervision unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.
Young children should be supervised to ensure that they do not play with the appliance.
4. Do not use the vacuum cleaner without a dust bag. Replace the dust bag before it is full in order to maintain the best efficiency.
5. Do not use the vacuum cleaner to pick up matches, live ashes or cigarette butts. Keep the vacuum cleaner away from stoves and other heat sources.
Heat can deform and discolour the plastic parts of the unit.
6. Avoid picking up hard, sharp objects with the vacuum cleaner as they may damage the cleaner parts. Do not stand on the hose assembly. Do not put a weight on the hose.
Do not block the suction or the exhaustion part.
7. Switch the vacuum cleaner off at the machine before unplugging from the electrical outlet. Do not pull on the cord to disconnect the plug from the electrical outlet. Ensure that it is disconnected before attending to the filter.
8. The plug must be removed from the socket out-let before cleaning or maintaining the appliance.
9. The use of an extension cord is not recommended.
10. If your vacuum cleaner is not operating correctly, switch off the power supply and consult an authorized service agent.
11. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
12. The vacuum cleaner is provided with a self-resetting thermal cut-out which automatically shuts off on over-heating. Overheating can be caused by blockage in the filter, nozzle, tube or hose. After removing the cause and allowing the motor to cool, the vacuum cleaner will automatically restart.



1 ASSEMBLING THE CLEANER

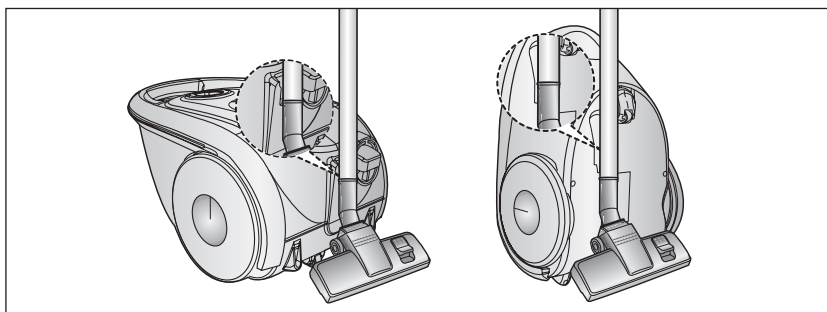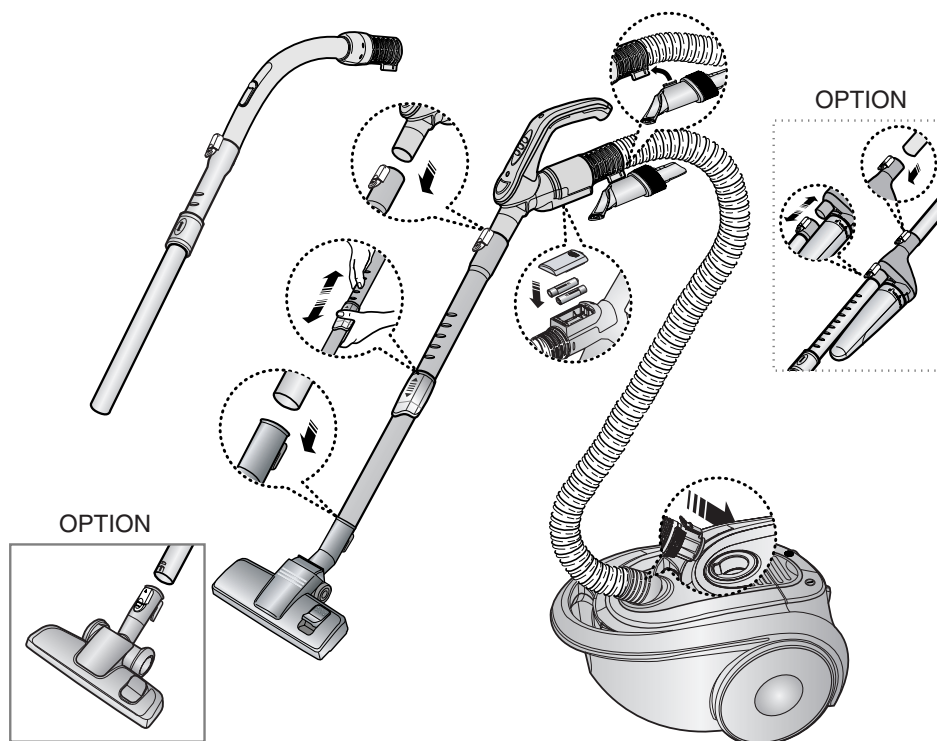

For storage, park the floor nozzle.

2 OPERATING THE CLEANER


2-1 POWER CORD

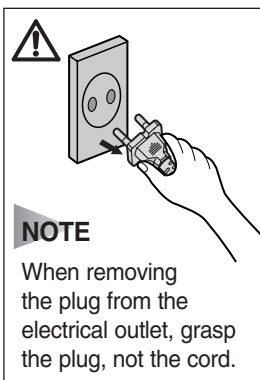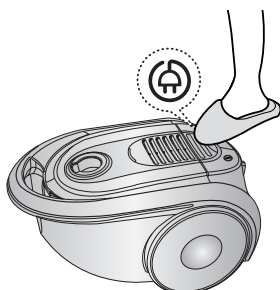

NOTE

When removing the plug from the electrical outlet, grasp the plug, not the cord.


2-2 ON/OFF SWITCH

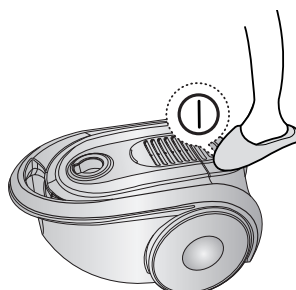

2-3 UV STERILIZATION LAMP(OPTIONAL)

The UV light is effective to kill bacteria in the dust chamber's filter, and when pushed the "ON/OFF" switch button, the UV lamp is turned on automatically and keeps performing the bacteria killing operation as long as the light remains on.

Besides, although it is stopped when the UV lamp is turned on it continues killing bacteria in the dust chamber's filter.

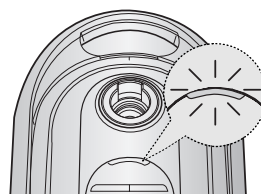


UV STERILIZATION LAMP

NOTE : Do not stare for a long time the UV STERILIZATION LAMP directly as can be harmful in eyes.

2-4 AIR CONTROL

To reduce suction for cleaning draperies, small rugs, and other light fabrics, pull the tap air until the hole is open.

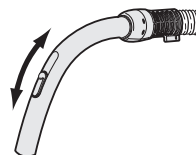


2-5 POWER CONTROL


1) BODY-CONTROL TYPE

MIN = For delicate surface e.g. net curtains.

MAX = For hard floors and heavily soiled carpets.

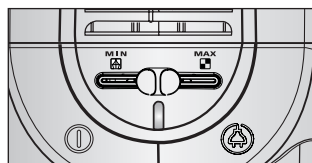

2) REMOTE-CONTROL TYPE (INFRARED-CONTROL)

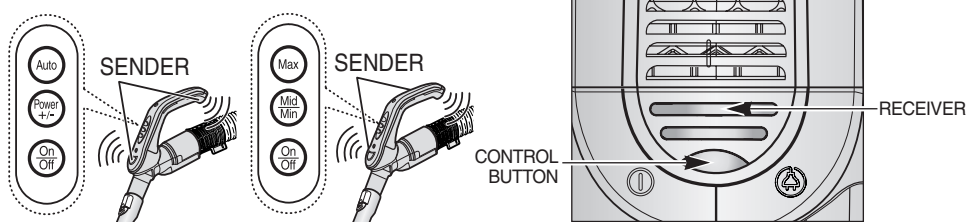


HANDLE CONTROL

Press Power Control button repeatedly to select correct mode.
(STOP → MIN → MID → MAX → STOP)

NOTE :


1. When using the control button for suction power, make sure that the transmitter of the remote controller not be blocked by your body.
2. When operating the cleaner in a room with a high ceiling or under intensive light, the suction power controlling button may not work properly. So, use the "Power Control" button on the main body.
3. When the battery is run down, it does not work with the button pressed on the handle control part. In this case, replace the battery. (How to change: Refer to User Manual No5.)

AUTO MODE (OPTIONAL)

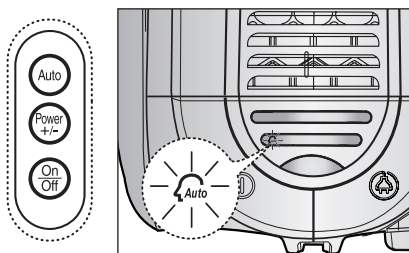


1. If pressing the "AUTO BUTTON" of the handle, "AUTO-LAMP" of the main body turns on and operates.
2. AUTO-MODE adjusts absorption power depending on increase or decrease of sucked dusts to maintain optimum cleaning status.
3. The "Power +/-" button can adjust power to MIN/MID/MAX.

2-6 USING FLOOR TOOLS

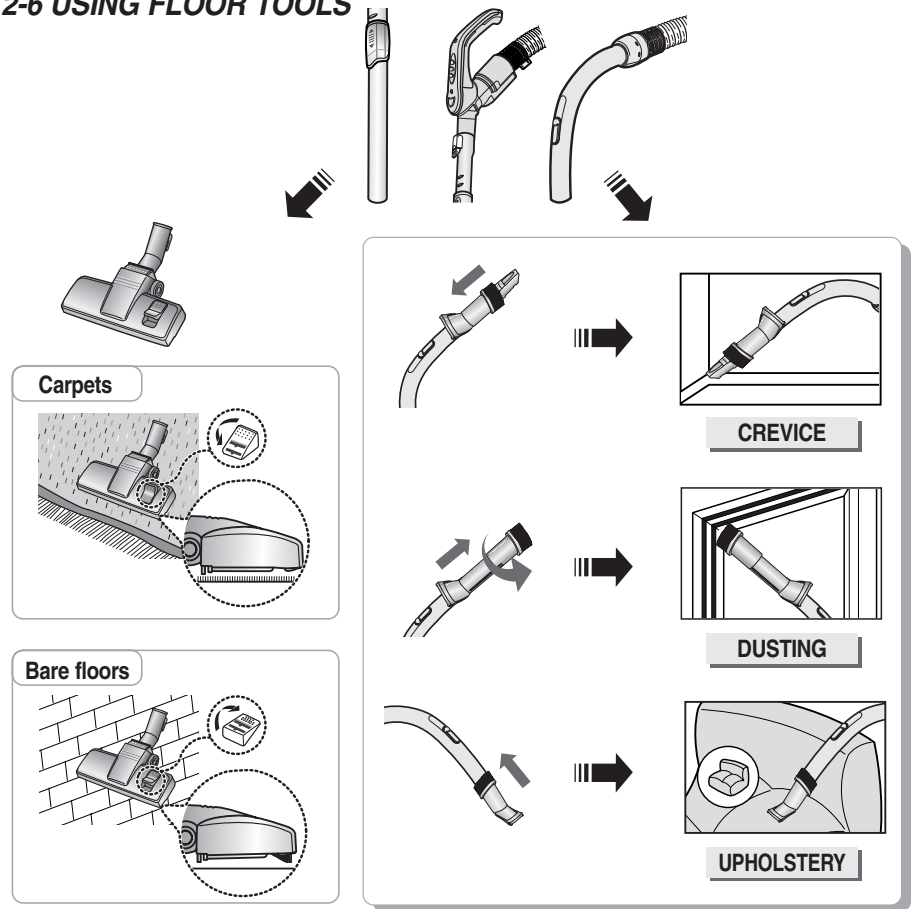


OPTION

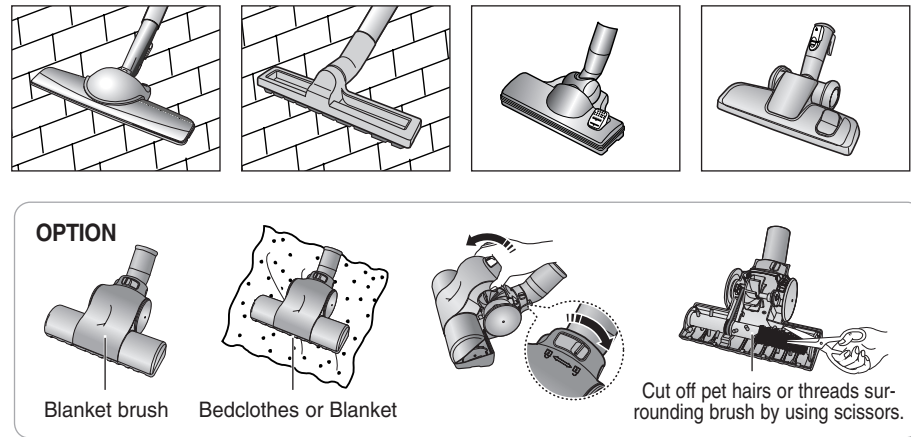

3 CHECK FILTER INDICATOR


1) BODY-CONTROL TYPE

When the "CHECK-FILTER LAMP" light comes on, please change the DUST BAG(3-1) as shown in the following illustrations.

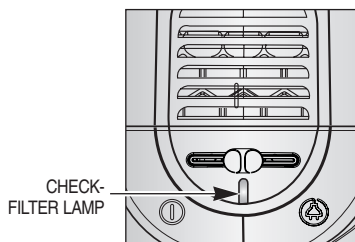


2) REMOTE-CONTROL TYPE

When the "CHECK-FILTER LAMP" light comes on, please change the DUST BAG (3-1) as shown in the following illustrations.

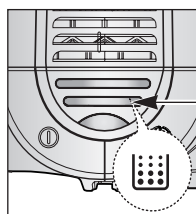


AUTO-MODE

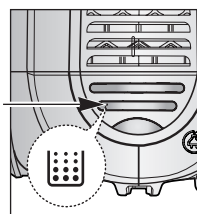


NON AUTO-MODE

3-1 CHANGING THE DUST BAG

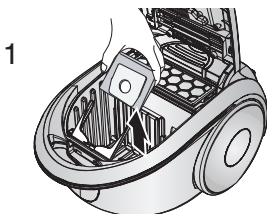


1

2

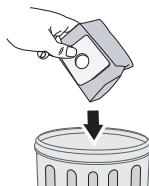

3

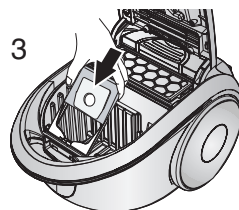

NOTE : A used dust bag can be sealed by removing the paper from the adhesive strip and sealing the strip over the hole.




OPTIONAL


• FOR CLOTH BAG

After using, if the cloth bag is full of dust, clean the cloth bag and use it again.

4 CLEANING THE CYCLONE FILTER(OPTIONAL)

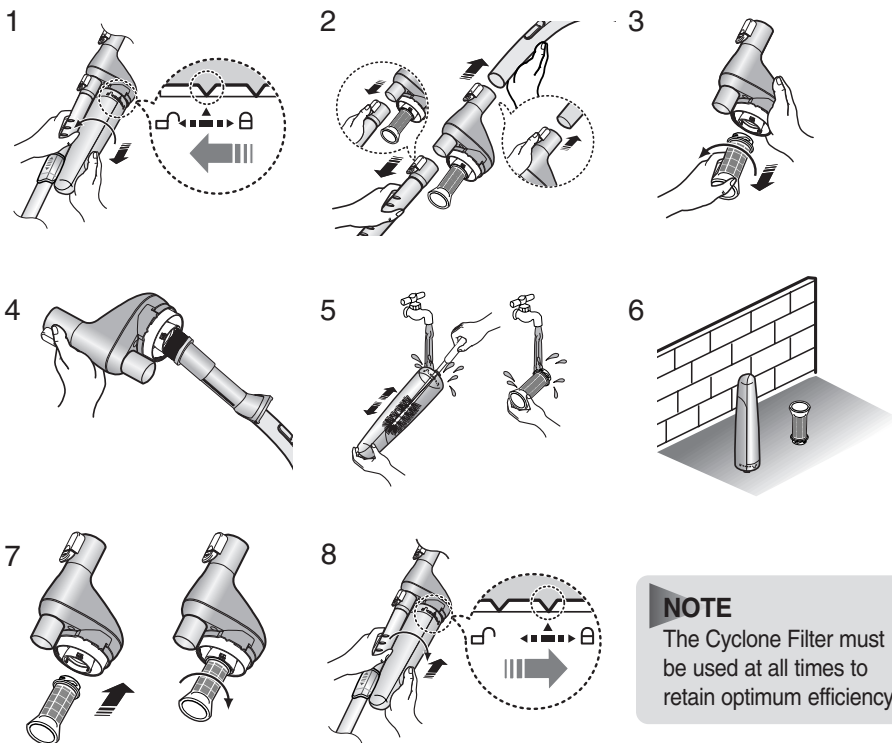

5 CHANGE THE BATTERY(OPTIONAL)

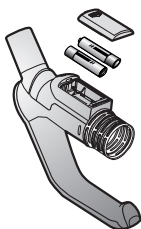

BATTERY TYPE : AA Size



NOTE


When the vacuum cleaner does not operate, replace the batteries.
If the problem persists, please contact our authorized dealer.



WARNING

1. Never disassemble or recharge the batteries.
2. Never heat up the batteries or throw them into fire.
3. Do not reverse (+),(-) terminals.
4. Dispose the batteries properly.


6 CLEANING THE INLET FILTER

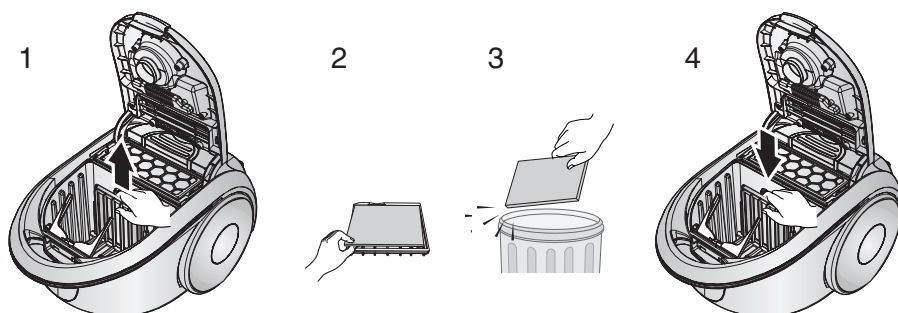


NOTE : Don't throw away the filter

7 OUTLET FILTER


OPTION : SILVER NANO HEPA H13 + CARBON

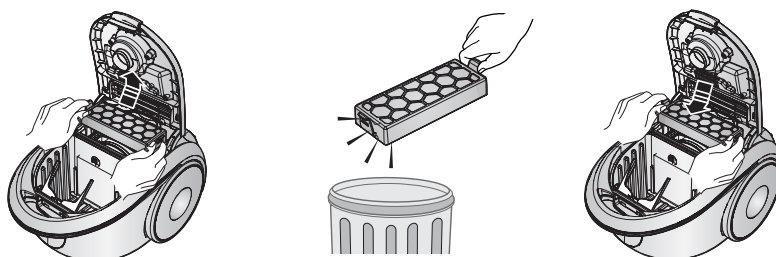

OPTION : SILVER NANO HEPA H13

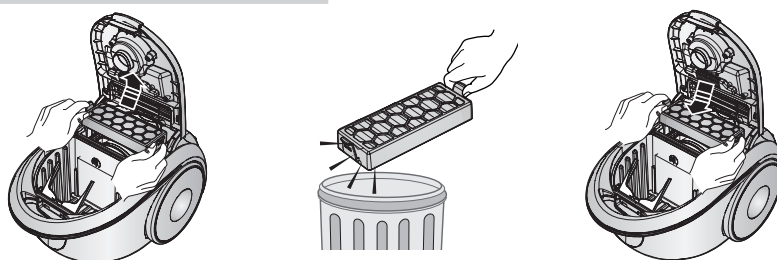

OPTION - MICRO FILTER

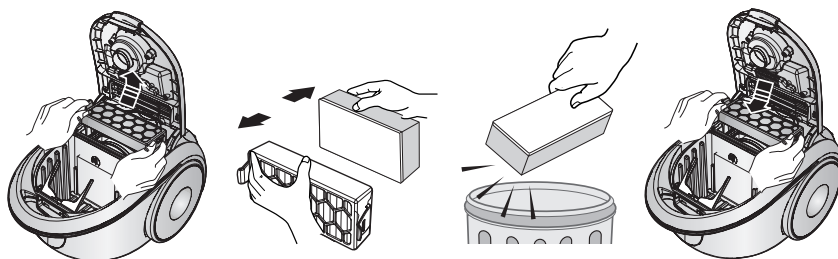


NOTE : Replacement filters or bags can be bought from your local Samsung distributor.

- IF YOU HAVE A PROBLEM

PROBLEM	CAUSE	REMEDY
Motor does not start.	No power supply. Thermal cut-out.	Check cable, plug and socket. Leave to cool.
Suction force is gradually decreasing.	Nozzle, suction hose or tube is blocked.	Check for blockage and remove.
Cord does not rewind fully.	Check that the cord is not twisted or wound unevenly.	Pull the cord out 2-3m and push down the cord rewind button.
Vacuum cleaner does not pick up dirt.	Crack or hole in hose.	Check hose and replace if required.
Low or decreasing suction	Filter is full with dust.	Please check filter and, if required, clean as illustrated in the instructions.

المكنسة الكهربائية

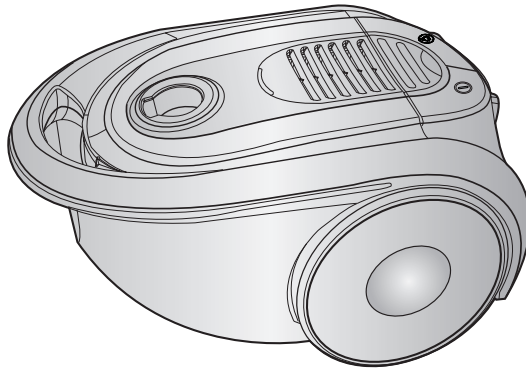


* اقرأ تعليمات التشغيل بعناية قبل تشغيل هذه الوحدة.
* للاستخدام الداخلي فقط.


قم بتسجيل منتجك على www.samsung.com/global/register

احتياطات هامة

١. اقرأ كل التعليمات بعناية. قبل تشغيل الجهاز، تأكد من أن فولت الكهرباء لديك يماثل الفولت المشار إليه على اللوحة الموجودة أسفل المكنسة.
٢. تحذير: لا تستعمل المكنسة الكهربائية إن كانت الأرض مبللة.
لا تستخدمها لشطف الماء.
٣. هذا الجهاز غير مخصص للاستعمال من قبل الصغار أو غير الأسوياء بدون إشراف، إلا تحت إشراف شخص مسؤول ليتأكد من سلامة استعمال الجهاز.
يجب مراقبة الأطفال الصغار للتأكد من عدم عبثهم بالجهاز.
٤. لا تستعمل المكنسة الكهربائية بدون كيس الغبار. استبدل كيس الغبار قبل أن يمتلئ تمامًا لكي تحافظ عمل المكنسة بكفاءة.
٥. لا تستعمل المكنسة الكهربائية في التقاط أعواد الثقاب، أو الرماد المشتعل، أو أعقاب السجائر. احتفظ بالمكنسة الكهربائية بعيداً عن الموقد أو أي مصادر للحرارة.
فقد تؤدي الحرارة إلى تغيير شكل أو لون الأجزاء البلاستيكية بالوحدة.
٦. تجنب التقاط الأشياء الصلبة والحادة فقد تتلف أجزاء المكنسة. لا تقف فوق الخرطوم.
ولا تضع أي أشياء ثقيلة فوق الخرطوم. احرص على عدم انسداد الجزء الخاص بالشفط أو الطرد.
٧. أوقف تشغيل المكنسة الكهربائية قبل فصلها عن مصدر التيار. لا تسحب السلك لفصل الفيشة عن مصدر التيار. وتأكد من فصل الجهاز قبل التعامل مع الفلتر.
٨. يجب نزع الفيشة من المقبس قبل تنظيف الجهاز أو صيانتة.
٩. لا بنصح باستعمال أجزاء تمديد سلك الكهرباء.
١٠. إن كانت المكنسة الكهربائية لا تعمل بشكل صحيح، أوقف التشغيل واستشر وكيل الخدمة المعتمد.
١١. إن تلف سلك الكهرباء، يجب استبداله عن طريق المصنع أو وكيل الخدمة أو بواسطة الفني المختص لتجنب وقوع أي مخاطر.
١٢. المكنسة الكهربائية مزودة بمحرار ذاتي الضبط بحيث يوقف تشغيل الجهاز تلقائيًا إن ارتفعت الحرارة أكثر من اللازم. قد يكون سبب الحرارة انسداد الفلتر أو الفوهة أو الأنبوب أو الخرطوم. تشتغل المكنسة تلقائيًا بعد التخلص من السبب وترك المحرك ليبرد.

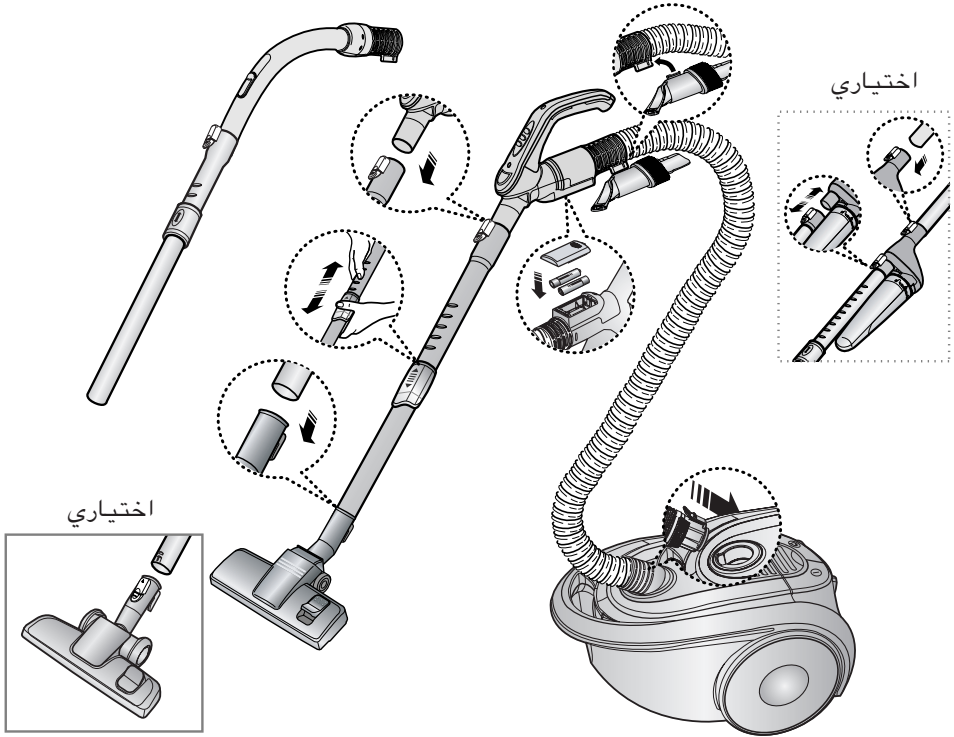


◀ قد تختلف الخصائص باختلاف الموديل.

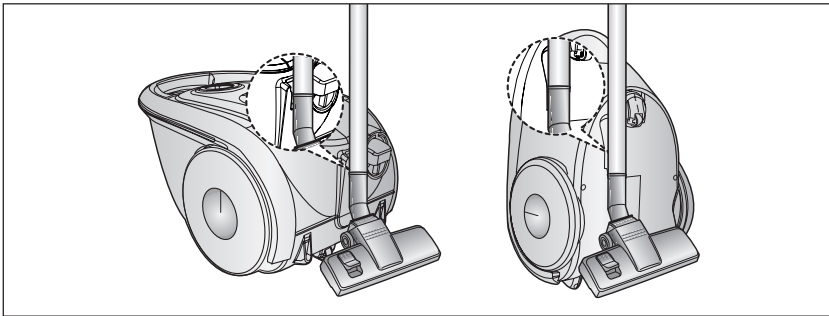


اركن فوهة البلاط لتخزين المكسنة الكهربائية.


٢-٢ مفتاح التشغيل/الإيقاف

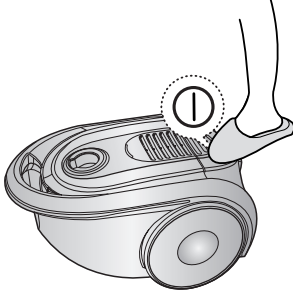

١-٢ سلك الكهرباء

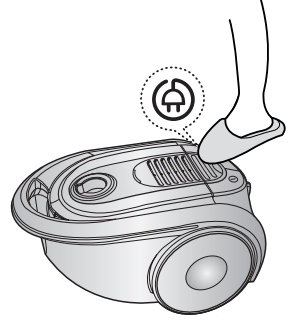

٣-٢ مصباح التعقيم بالأشعة فوق البنفسجية (اختياري)

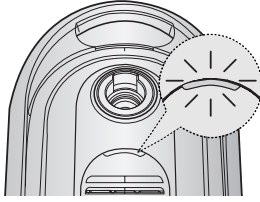


مصباح التعقيم بالأشعة فوق البنفسجية

يعد مصباح UV فعالاً لقتل البكتيريا الموجودة بفلتر مخزن الغبار، عند الضغط على مفتاح التشغيل/الإيقاف، يعمل مصباح UV تلقائياً ويستمر في قتل البكتيريا طالما ظل المصباح مضيئاً. كما أنه بالرغم من كون المكنسة متوقفة عن العمل، يستمر مصباح UV الذي يعمل في قتل البكتيريا بفلتر مخزن الغبار.


ملاحظة: لا تحقق لفترة طويلة في مصباح التعقيم بالأشعة فوق البنفسجية UV STERILIZATION LAMP مباشرة لأن ذلك قد يؤذي عينيك.

٤-٢ التحكم بالهواء

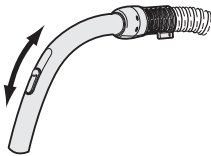

لتقليل قوة الشفط لتنظيف أغطية الأثاث والسجاد الصغير وغيرهم من المنسوجات الصغيرة، اسحب سدادة الهواء حتى تفتح الفتحة.



٢-٥ التحكم في القوة

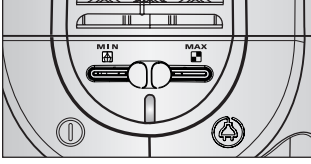

(١) نوع التحكم من جسم المكنسة

MIN = للسطح الرقيق مثل الستائر الشبكية.
MAX = للأرضيات الصلبة والسجاد شديد الاتساخ.

(٢) نوع وحدة التحكم عن بعد (التحكم بالأشعة تحت الحمراء)

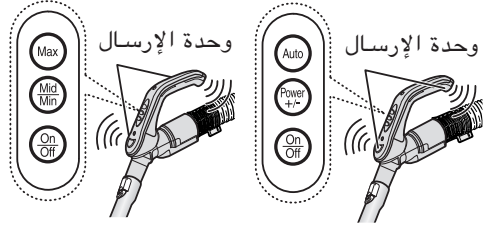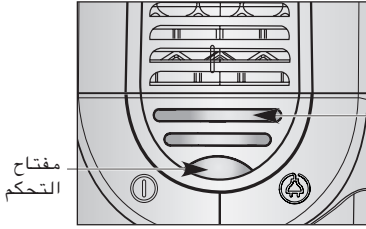

التحكم بالمقبض



اضغط زر Power Control
مراراً لاختيار الوضع الصحيح.
(STOP → MIN → MID → MAX → STOP)

ملاحظة:


١. عند استعمال زر التحكم في قوة الشفط، تأكد من أن جسمك لا يحجب جهاز الإرسال بوحدة التحكم عن بعد.
٢. عند تشغيل المكنسة داخل غرفة سقفها مرتفع أو بها إضاءة عالية، قد لا يعمل زر التحكم بقوة الشفط بشكل صحيح. لذا استعمل زر التحكم في قوة الشفط « Power Control » الموجود على جسم المكنسة.
٣. عند نفاد شحنة البطارية، لا يعمل والزر مضغوطاً بجزء التحكم بالمقبض. في هذه الحالة، استبدل البطارية (للتعرف على كيفية تغييرها، راجع دليل المستخدم رقم ٥).

الوضع الآلي (اختياري)


١. بالضغط على زر « AUTO » بالمقبض، يتم تشغيل مصباح « AUTO » بالجسم الرئيسي وسيبدأ بالعمل.
٢. يقوم وضع AUTO-MODE بتعديل قوة الامتصاص وفق زيادة أو نقصان الغبار الذي يتم شفطه للاحتفاظ بأفضل وضع تنظيف ممكن.
٣. يمكن استعمال زر « Power +/- » في تعديل القوة إلى MIN/MID/MAX.

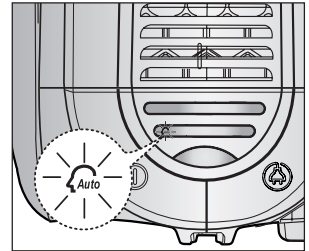

٦-٣ استعمال أدوات الأرضيات

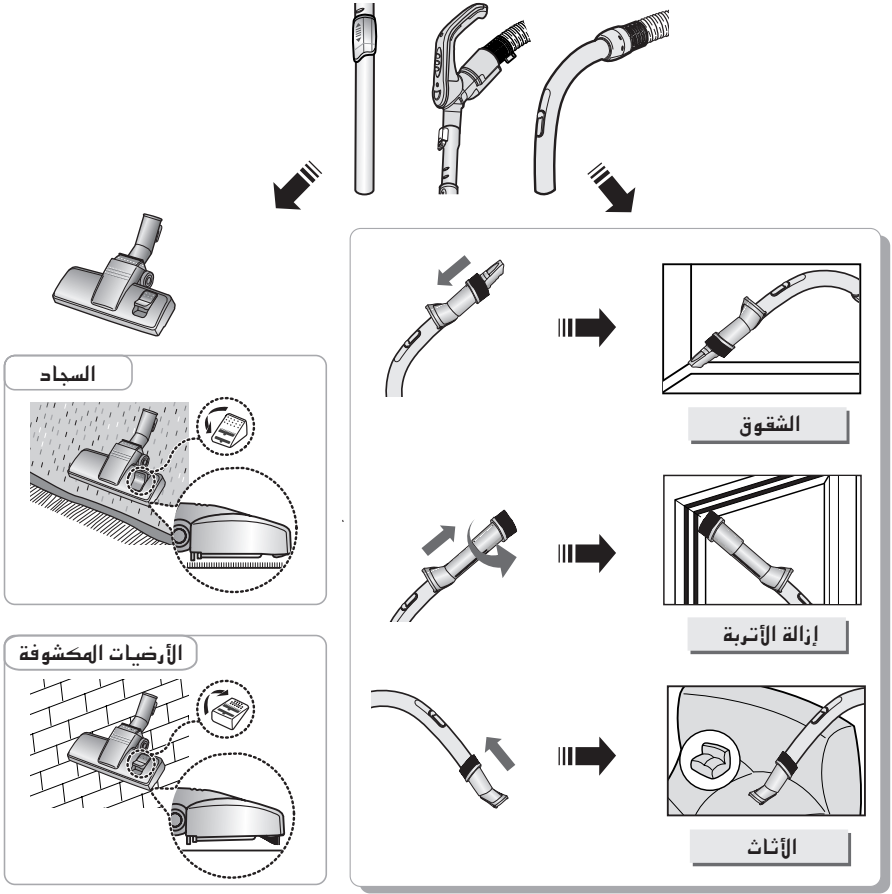


اختياري

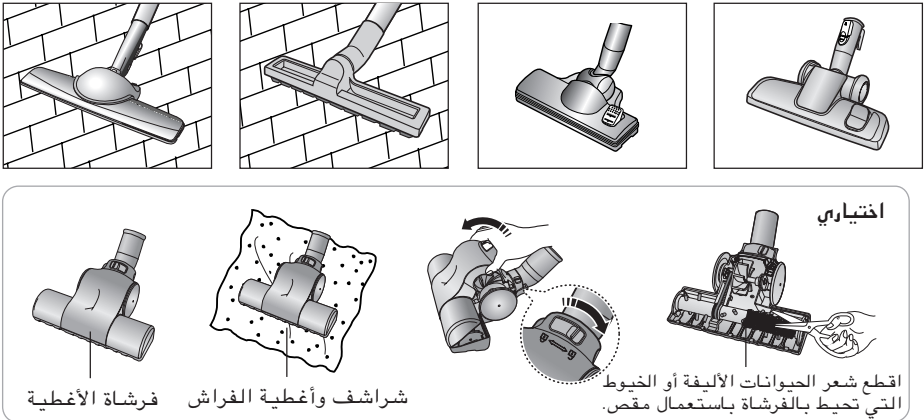

٣ فحص مؤشر بيان الفلتر


(٢) نوع التحكم بوحدة التحكم عن بعد
إن أضاء مصباح فحص الفلتر
« CHECK-FILTER LAMP », يجب
تغيير كيس الغبار (١-٣) كما هو
موضح بالرسم التوضيحي التالي.

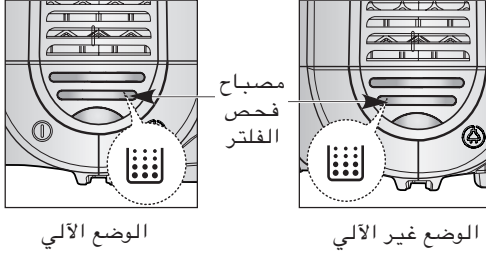

(١) نوع التحكم من جسم المكنسة
إن أضاء مصباح فحص الفلتر
« CHECK-FILTER LAMP », يجب
تغيير كيس الغبار (١-٣) كما هو
موضح بالرسم التوضيحي التالي.



١-٣ تغيير كيس الغبار

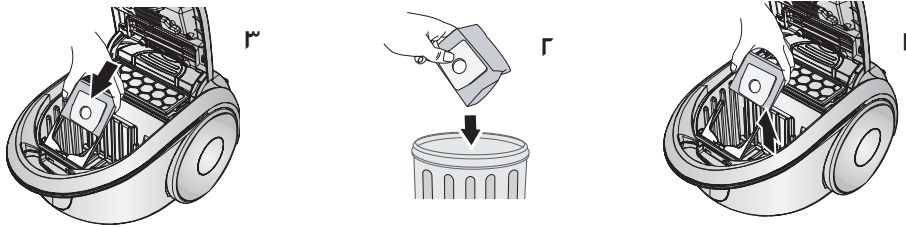


ملاحظة: يمكن إحكام إغلاق كيس الغبار وذلك بنزع الورقة من الشريط اللاصق ثم لصق الشريط على الفتحة.

اختياري



• بالنسبة للكيس القماشى
إن كان الكيس القماشى ممتلئاً بالغبار بعد الاستعمال، نظف الكيس ثم استعمله مرة أخرى.

٤ تنظيف الفلتر الحزوني (اختياري)

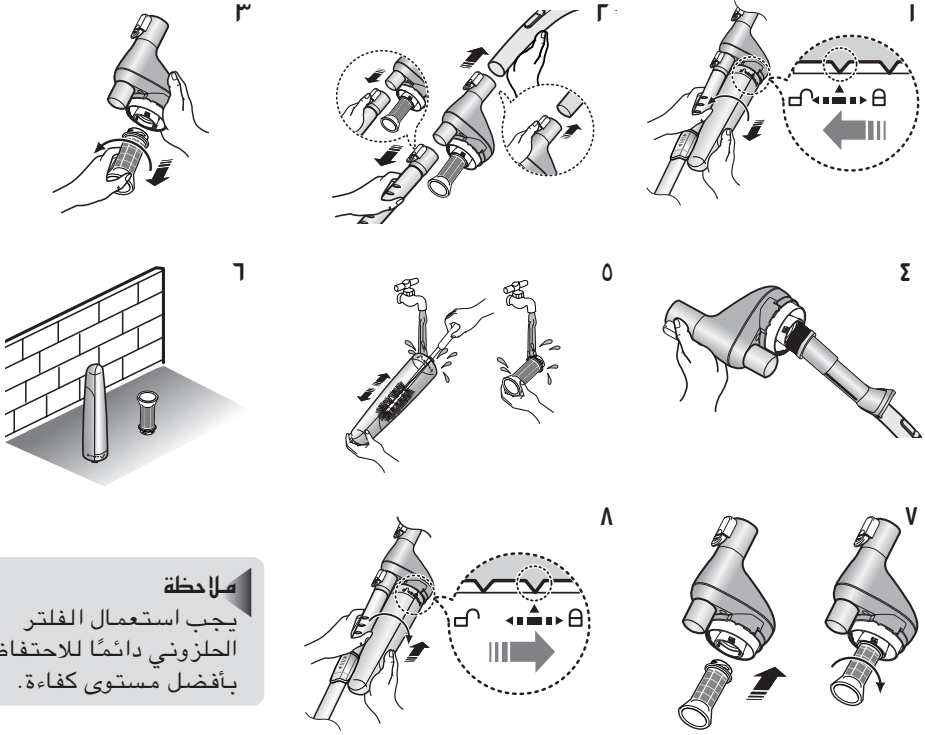

ملاحظة

يجب استعمال الفلتر الحزوني دائماً للاحتفاظ بأفضل مستوى كفاءة.


٥ تغيير البطارية (اختياري)



نوع البطارية: حجم AA

ملاحظة

إن كانت المكينة الكهربائية لا تعمل، استبدل البطاريات. إن استمرت المشكلة، من فضلك اتصل بالموزع المعتمد.

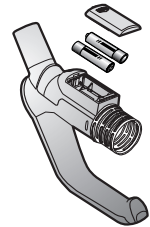


٣. لا تعكس قطبي البطارية (+)، (-).
٤. تخلص من البطاريات بشكل صحيح.

١. لا تفك البطاريات أبداً أو تعيد شحنها.
٢. احرص على عدم تسخين البطاريات أو إلحاقها بالنار.




٧ تنظيف فلتر إدخال الهواء

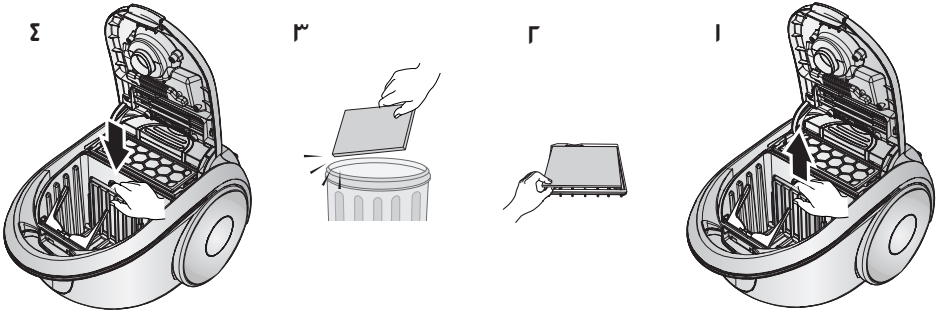


ملاحظة: لا ترمم الفلتر

٧ فلتر إخراج الهواء


اختياري: **SILVER NANO HEPA H13 + CARBON**

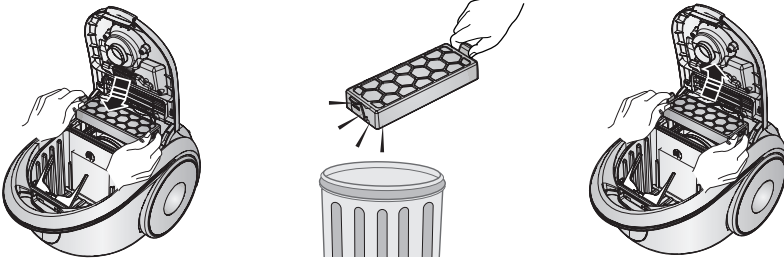

اختياري: **SILVER NANO HEPA H13**

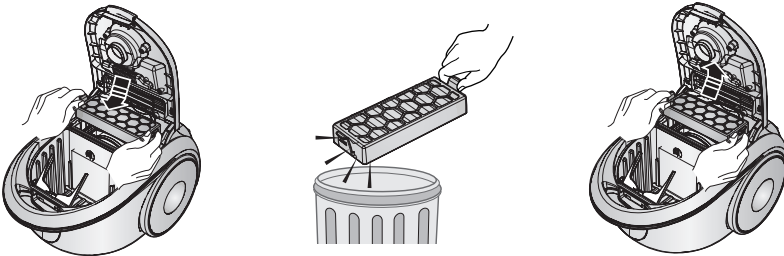

اختياري - MICRO FILTER

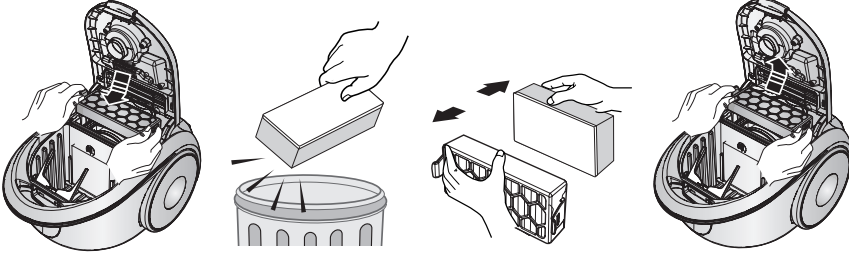

ملاحظة: قطع غيار الفلاتر أو الأكياس يمكن شراؤها من موزع سامسونج المحلي.

- إن كانت لديك مشكلة

المشكلة	السبب	الحل
المحرك لا يعمل .	لا يوجد تيار كهرباء . انقطاع بسبب ارتفاع الحرارة .	افحص الكابل والفيشة والمقبس . اتركه يبرد .
قوة الشفط تقل تدريجياً .	الفوهة أو خرطوم أو أنبوب الشفط مسدود .	تأكد من وجود أي انسدادات وتخلص منها .
السلك لا يلف بالكامل .	تأكد من أن السلك غير ملتو أو ملتف بشكل غير متساو .	اسحب السلك إلى الخارج لمسافة ٢-٣ م ثم اضغط زر لف السلك .
المكنسة الكهربائية لا تلتقط الأوساخ .	يوجد شرخ أو فتحة بالخرطوم .	افحص الخرطوم واستبدله إذا لزم الأمر .
قوة الشفط منخفضة أو تتناقص .	الفيلتر ممتلئ بالغبار .	من فضلك افحص الفيلتر ونظفه إذا لزم الأمر بالطريقة التي سبق توضيحها .

جنوسماس كشرش عالم مع قدخبل لاصت إلإى جري جنوسماس تاجتن ملل ققالع اهل قلئسأ .

Web Site	Customer Care Center ☎	Country
www.samsung.com/mea	800SAMSUNG (7267864)	U.A.E